QualityCraft
design forward living

CONVECTION HEATER

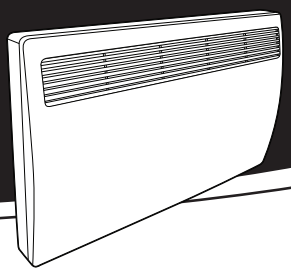

Model: QCC-1000

IMPORTANT

PLEASE NOTE: WHEN YOU OPEN THE CARTON, CAREFULLY CHECK THE UNIT AND MAKE SURE THERE IS NO DAMAGE. IF YOU HAVE ANY PROBLEMS WITH THE UNIT, WITH HOW THE VARIOUS FUNCTIONS WORK, DAMAGED OR MISSING PARTS PLEASE CALL 1-800-459-4409 (8:30 AM TO 5 PM EST) IMMEDIATELY FOR SERVICE.

NOTE: DO NOT RETURN UNIT TO THE STORE BEFORE CALLING THE TOLL FREE NUMBER. DO NOT DISPOSE OF YOUR CARTONS UNTIL YOU ARE COMPLETELY SATISFIED WITH YOUR NEW CONVECTOR HEATER.

INSTRUCTION MANUAL

ATTENTION: Find a location for the convection heater that is protected from direct sunlight.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: THE HEATER MUST BE INSTALLED BY A CERTIFIED ELECTRICIAN AND IN ACCORDANCE WITH ALL LOCAL AND NATIONAL ELECTRICAL CODES.

THIS CONVECTION HEATER MUST BE USED IN CONJUNCTION WITH A WALL SWITCH OR WALL THERMOSTAT.

THIS UNIT REQUIRES 240V HARD WIRING.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1) **Read all instructions carefully before using the heater.**
2) **This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothing and curtains at least 3 feet (0.9 m) away from front, sides and rear of the heater.**
3) **Extreme caution is necessary when any heater is used by or near children or individuals with disabilities and whenever the heater is left operating and unattended.**
4) **Do not operate the heater if the heater malfunctions, has been dropped or damaged in any manner. Disconnect power at service panel and have heater inspected by a qualified electrician before use.**
5) **Do not use outdoors.**
6) **This heater is not intended for use in bathrooms, laundry areas or in wet or moist indoor locations. Never place the heater where it may fall into a bathtub or other water containers.**
7) **To disconnect the heater, turn controls to OFF and turn off power to heater at main disconnect panel.**
8) **Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock, fire or may damage the heater. Do not use on soft surfaces, such as a bed where openings may become blocked.**
9) **To prevent possible fire, do not block air intakes or exhaust in any manner.**
10) **Heaters may have hot and sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.**
11) **Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.**

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

GENERAL INFORMATION

This convection heater is intended for permanent wall-mounting with the provided brackets.

The heater has a thermal cut-off protection. If the thermal cut-off protection trips, switch off the power. The unit should reset automatically after 10 minutes. If the thermal cut-off protection trips again, determine the reason for overheating.

SPECIFICATIONS

MODEL	ELECTRICAL RATING		PRODUCT DIMENSIONS		
	VOLTS	WATTS	HEIGHT (cm)	WIDTH (cm)	DEPTH (cm)
QCC-1000	240	1000	40.5	53.7	11.2

PARTS LIST

Mounting bracket 1
Screws 4
Wall anchor 4

INSTALLATION

Tools required:

- Electric drill
- Phillips (cross-head) screwdriver
- Tape measure

Choose a suitable location for mounting the convector. The location shall have enough space and clearance as illustrated in Fig. 1.

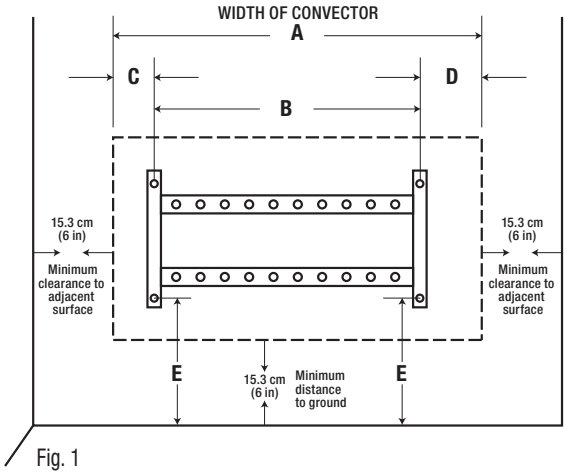

Fig. 1

MODEL	A (cm)	B (cm)	C (cm)	D (cm)	E (cm)
QCC-1000	53.7	33.7	12.2	7.8	24.8

WALL MOUNTING INSTRUCTIONS

1. Release the mounting bracket by pressing the locking brackets on both sides.
2. Use the mounting bracket as a template by holding it against the wall as illustrated in Fig. 1.
3. Follow the dimensions specified in Fig. 1 and place mounting bracket in the desired location.
4. Mark the 4 screw holes. Place mounting bracket on the screw markings and ensure the mounting bracket is perfectly level.
5. Predrill holes and insert 4 wall anchors. Wall anchors are needed for mounting on drywall or concrete walls. Ensure you use the proper anchors for your wall type.
6. Replace the mounting bracket and fasten it with screws (minimum 4 screws).
7. Mount the convector to the mounting bracket and engage the 2 locking brackets at the top. See Fig. 2.

CAUTION – HIGH TEMPERATURE, RISK OF FIRE. KEEP ELECTRICAL CORDS, DRAPERY, FURNISHINGS AND OTHER COMBUSTIBLES AT LEAST 3 FT (0.9 M) AWAY FROM THE FRONT OF THE HEATER AND AWAY FROM THE SIDES AND REAR OF HEATER.

WARNING – TO REDUCE RISK OF FIRE, DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THE HEATER.

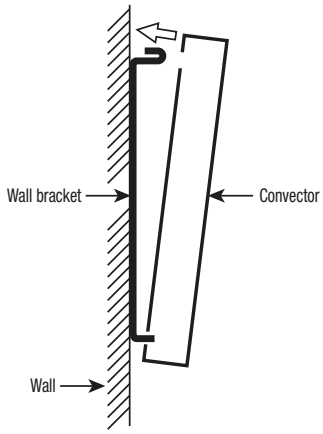

Fig. 2

ELECTRICAL WIRING

WARNING: THIS CONVECTION HEATER IS TO BE USED ON A 240 VAC POWER SUPPLY AND GROUNDED OUTLETS.

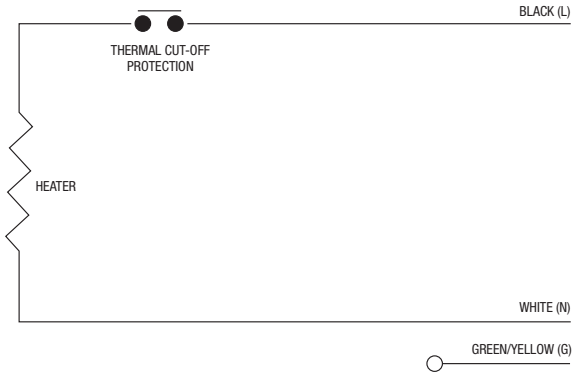

CAUTION: TURN OFF MAIN POWER BEFORE BEGINNING INSTALLATION TO AVOID ELECTRIC SHOCK.

WARNING: THE HEATER MUST BE INSTALLED BY A CERTIFIED ELECTRICIAN AND IN ACCORDANCE WITH ALL LOCAL AND NATIONAL ELECTRICAL CODES.

1. Connect white colored neutral wire (N).
2. Connect black colored live wire (L).
3. Connect green colored ground wire (G). All connections using twist on wire connectors. Put all wires properly into the junction box before replacing the cover with the provided screw.

OPERATION

Adjust the wall thermostat (not included) to increase or decrease the temperature setting. In the summer or whenever the convection heater will not be used for an extended period of time, turn OFF the convector at the main switch panel (or circuit breaker).

MAINTENANCE

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ALWAYS SWITCH OFF THE UNIT AND WAIT 10 MINUTES TO ALLOW IT TO COOL BEFORE ATTEMPTING ANY MAINTENANCE OR CLEANING.

It is recommended that the heater is cleaned periodically in order to avoid dust blocking the grill and allow proper ventilation.

CLEANING

Wipe the unit with a soft damp cloth. Do not use abrasive cleaners or spray liquids on the unit surfaces.

Note: It is possible that the unit surface may discolour (yellow) over time, due to dust or cigarette smoke. This is normal and not a manufacturing defect.

WARRANTY

The heating element is guaranteed for 10 years and all other components are guaranteed for one year from the date of purchase. If the unit should fail to operate correctly, call customer service at 1-800-459-4409 (8:30 am to 5 pm EST). We will, at our discretion, either repair or replace the unit. It will have to be returned to us freight prepaid and we will return the repaired or replaced unit to you, freight prepaid. The company's sole obligation is to repair or replace the unit. This warranty is void if in the opinion of Quality Craft the unit has been tampered with, altered, misused, damaged, abused or used with the wrong power source. The warranty is for home use only and does not cover units used in commercial situations.

WARRANTY CLAIM PROCEDURE

If a claimable defect occurs, please fill out a claim form through our website at: www.qualitycraft.com or contact our customer service department at 1-800-459-4409 (8:30 am to 5 pm EST).

Before you make your claim call, please make sure you have:

1. The description of the heater
2. Proof of sale
3. Details regarding the defect
4. Name and address of the owner and installer.

Claims must be filled out in writing and returned within six (6) months of appearance of defect. Failure to comply with this stipulation will make the warranty null and void. We reserve the right to a thirty-day (30) delay following receipt of claim in which to inspect the product. We assume no responsibility for labor costs or removing/replacing a previously installed product or transportation or return of a product.

Imported by
Quality Craft

Laval, Quebec, Canada H7C 0A5
1-800-459-4409 (EST)
www.qualitycraft.com

Made in China